













**400 v  
Li-ion**

-  Airbag
-  Stored gas inflator
-  Seat belt pretensioner
-  SRS control unit
-  Battery low voltage
-  Gas strut / Preloaded spring
-  High strength zone
-  Cable cut
-  Low voltage device that disconnects high voltage
-  High voltage component
-  Battery pack, high-voltage
-  High voltage power cable




## 1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

### Brand logo

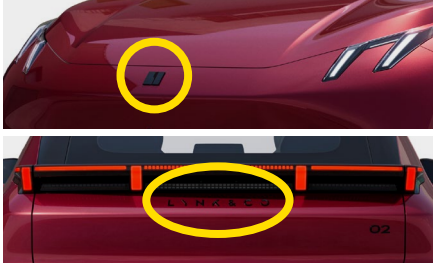

### Model name




### Charge port





## 2. Immobilisation / stabilisation / lifting


### Immobilise vehicle:

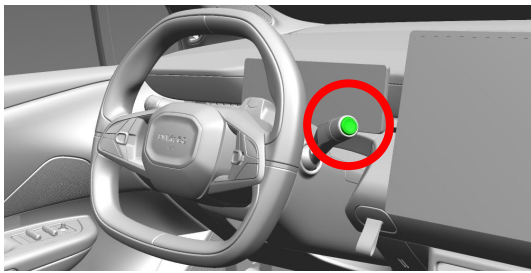1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position



### Lifting points:




-  Appropriate lifting points
-  High voltage battery

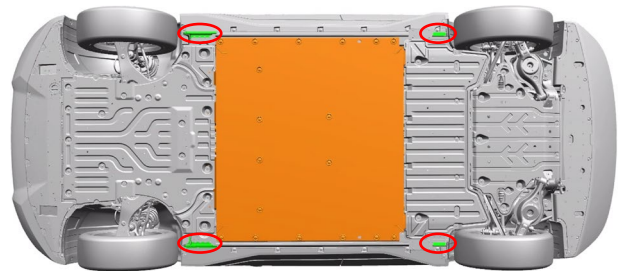



## 3. Disable direct hazards / safety regulations

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.

### Main method:


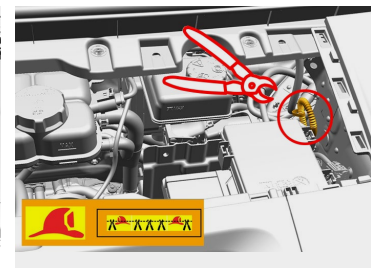
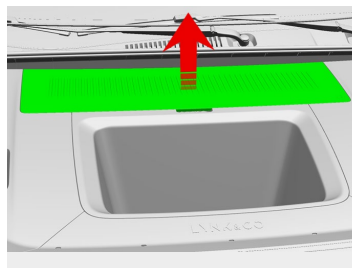
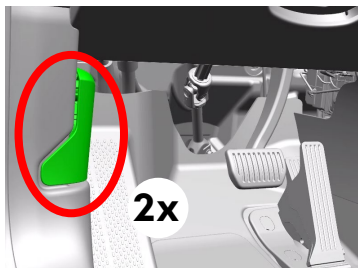


### Alternative method:

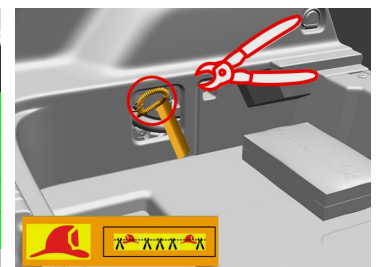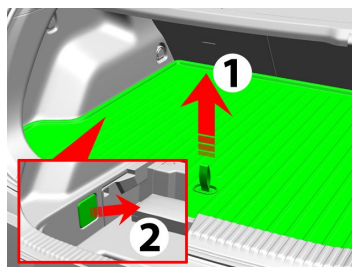



## Disconnect 12 Volt battery

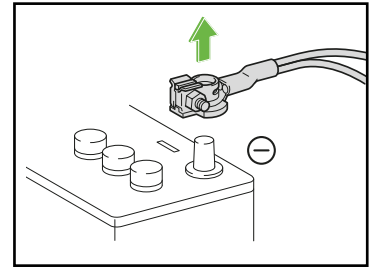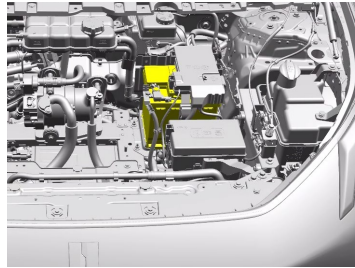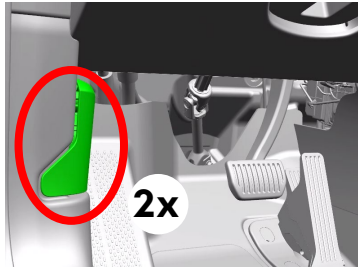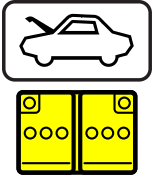


### Safety instructions

Always assume the vehicle is powered, even if it is silent!


Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active. Wear appropriate PPE.

## 4. Access to the occupants

### Seat adjustment

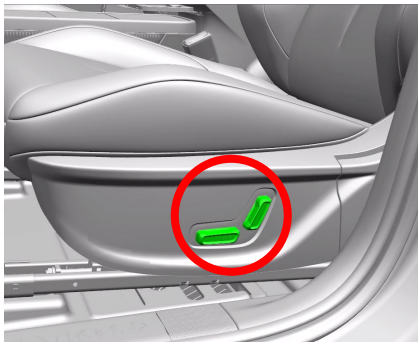


### Steering wheel, tilt control

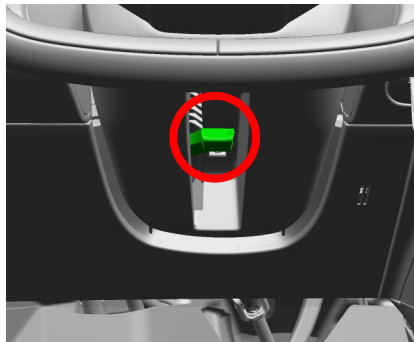

### Glass types

- A. Combination of tempered and laminated glass
- B. Tempered glass
- C. Laminated glass

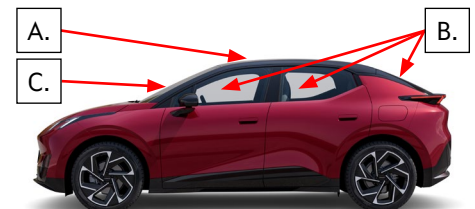


## 5. Stored energy / liquids / gases / solids

	400V	     
	12V	 
	HFC-1234yf 900g +/- 20g	   



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway. Wear appropriate PPE.





## 6. In case of fire

Extinguishing method for the high voltage (HV) battery:



LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.




## 7. In case of submersion


- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

## 8. Towing / transportation / storage


### Recovery hook storage

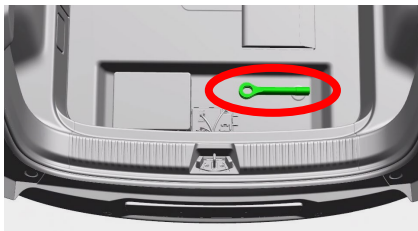

### Location front hook

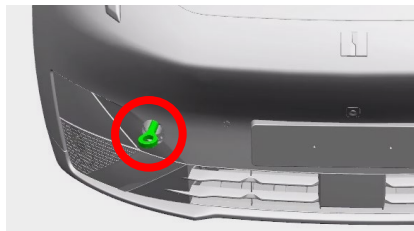

### Location rear hook

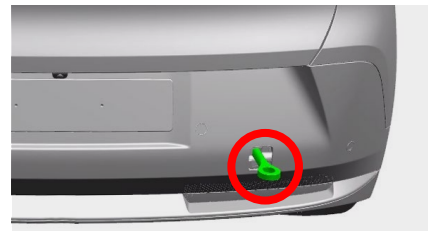


### Towing



STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE  $\geq 5M$  FROM OTHER OBJECTS OR VEHICLES!



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.



## 10. Explanation of pictograms used

	Electric Vehicle		Flammable
	Warning, Electricity		Hazardous to the human health
	General warning sign		Acute toxicity
	Warning: low temperature		Corrosives
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Bonnet
	Use thermal Infrared camera		Boot